


180 Dutton Avenue
 Buffalo, NY 14211
 www.wellworthproducts.com
 1-800-890-7935
 Date Prepared: 2/17/08

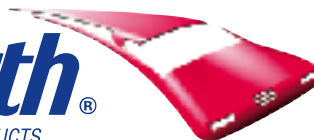

PACKAGING

1017 - 16 oz.
 Aerosol Can
 12 Per Case

KLEEN SEEK™ Foaming Battery Cleaner

DESCRIPTION

Kleen Seek™ is the easy way to clean and detect acid leaks. Just spray on the foamy cleaner to remove all energy sapping corrosion from battery parts. Wherever acid is present, Red Alert™ will cause the cleaner to turn bright red. Dissolves and neutralizes both acid and corrosion simultaneously. Also helpful in locating acid leaks from a cracked case or terminal joint. Use of Kleen Seek™ reduces voltage leaks and increases current flow.

USES

Cleans: • Battery Terminals • Cables • Hold Downs • Battery Boxes

DIRECTIONS

1. Spray Kleen Seek™ on the battery anywhere corrosion is present. Allow product to set for a few moments. 2. Flush with water. TO AVOID SPLASHING, USE A GENTLE STREAM OF WATER. COVER PAINTED SURFACES. 3. Repeat application to check if all corrosion has been removed. Continue this procedure until no red appears. 4. Wipe battery dry. 5. Finish the job by always spraying clean battery posts, cables and carrier with WellWorth's Life Guard™ battery protector to protect against future accumulations of energy sapping corrosive deposits.

STORAGE

Do not store in temperatures above 120°F (50°C). Do not puncture, incinerate or burn. Do not place near sources of heat.

SPECIFICATIONS

FLASH POINT : Propellant; -40°F
 EVAPORATION RATE : Faster Than
 (Water = 1)
 COLOR : Amber Color
 ODOR : Characteristic Solvent Odor
 SOLUBILITY IN WATER : Complete

HMIS HAZARD RATING			
0-Least	A-Goggles	HEALTH	1
1-Slight	B-Goggles, Gloves	FLAMMABILITY	4
2-Moderate	C-Goggles, Gloves,	REACTIVITY	0
3-High	Protective Wear	PERSONAL PROTECTION	A
4-Extreme			

FIRST AID MEASURES

EYE CONTACT: Wash eyes with fresh water. If irritation continues, contact a physician. SKIN CONTACT: Wash skin with fresh water. If irritation continues, contact a physician. INHALATION: Remove to fresh air. Give oxygen. Contact a physician. INGESTION: Do not induce vomiting-gastric lavage. Contact a physician. ChemTrec (USA) 800-424 9300.

NOTICE TO PURCHASER: Well•Worth Products, Inc. provides no warranty of any kind with respect to the product, whether express or implied including without limitation, the implied warranty of merchantability or fitness for any intended use or purpose; shall not be liable under any circumstances for any loss, damage, liability, injury or expense directly or indirectly resulting from, arising or related to the use or application of product; shall not be liable for consequential or incidental damages or loss of profits; and its liability shall be limited to replacement of the product.

ALWAYS CONSULT MSDS for further details on precautions for safe handling and use.